


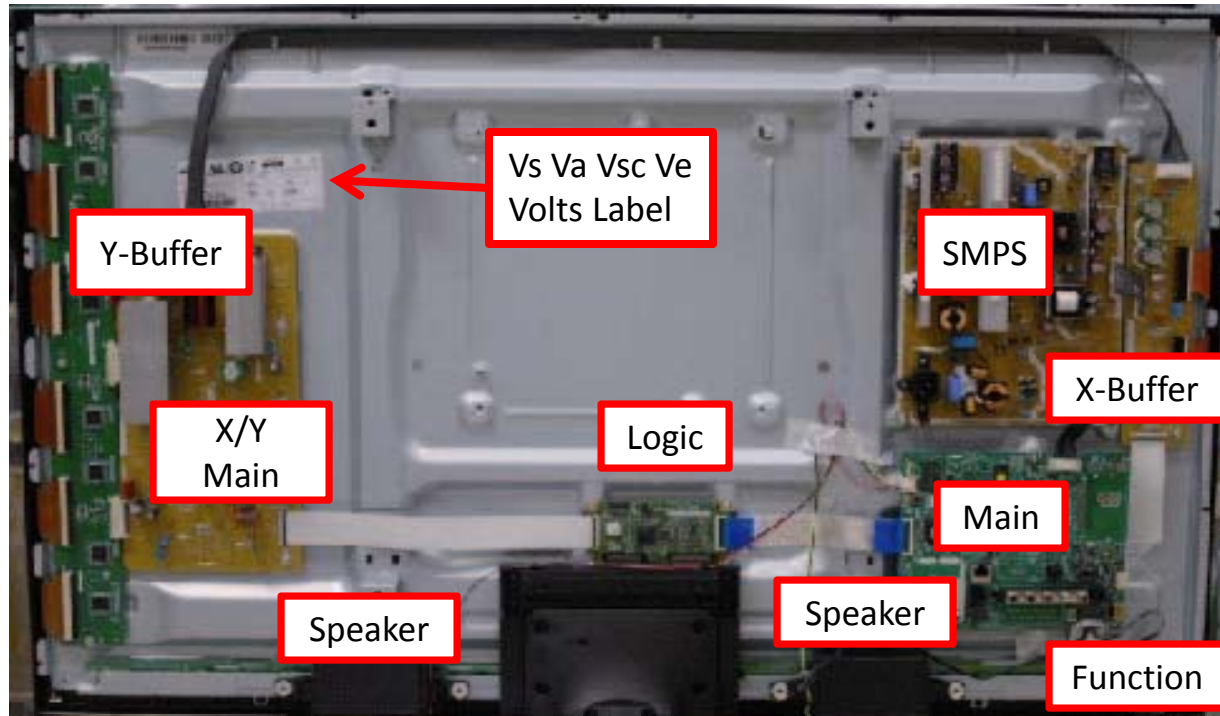

HELP : 888-751-4086; 866-894-0637 FE)

GSPN

<http://gspn3.samsungcsportal.com>

PLUS ONE

<http://my.plus1solutions.net/clientPortals/samsung>

HOT TIPS

-New 2012 Model... always check for latest bulletins and firmware updates.

-New combined X/Y Main Board

FIRMWARE

6/5/12

PL51E450A1FXZP / PN43E440A2FXZA /
PN43E450A1FXZA / PN43E450A1FXZC /
PN51E440A2FXZA / PN51E450A1FXZA /
PN51E450A1FXZC

Version: 1011.1

Avail on GSPN or Samsung,Com

Always check for latest updates


SERVICE BULLETINS

-None listed as of 6/5/12

Quick Parts: Verify before Ordering

No	Parts Category	Ver.	Parts No	Short Description
1	PCB	ALL	BN44-00509B	SMPS
2	PCB	ALL	BN96-20973A	Main PCB
3	PCB	ALL	BN96-21529C	Function PCB
4	PCB	ALL	BN96-22085A	Logic Main PCB
5	PCB	ALL	BN96-22086A	Buffer E
6	PCB	ALL	BN96-22089A	Buffer F
7	PCB	ALL	BN96-22090A	X/Y Main Drive
8	PCB	ALL	BN96-22093A	Buffer X
9	PCB	ALL	BN96-22094A	Buffer Y
10	Display	SD01	BN96-21348A	Panel
11	Display	TD02	BN96-22083A	Panel
12	Cosmetic	ALL	6003-000337	Stand Screw
13	Cosmetic	ALL	BN96-21670B	Speaker
14	Cosmetic	ALL	BN96-21989J	Front Cover
15	Cosmetic	ALL	BN96-21999A	Rear Cover
16	Cosmetic	ALL	BN96-22003B	Stand Guide
17	Cosmetic	ALL	BN96-22005A	Stand Base
18	Component	ALL	3903-000552	Power Cord
19	Component	ALL	BN96-13325F	LVDS Cable
20	Accessory	ALL	4301-000121	Battery
21	Accessory	ALL	BN63-02368B	Cleaning Cloth

■ 43" HD

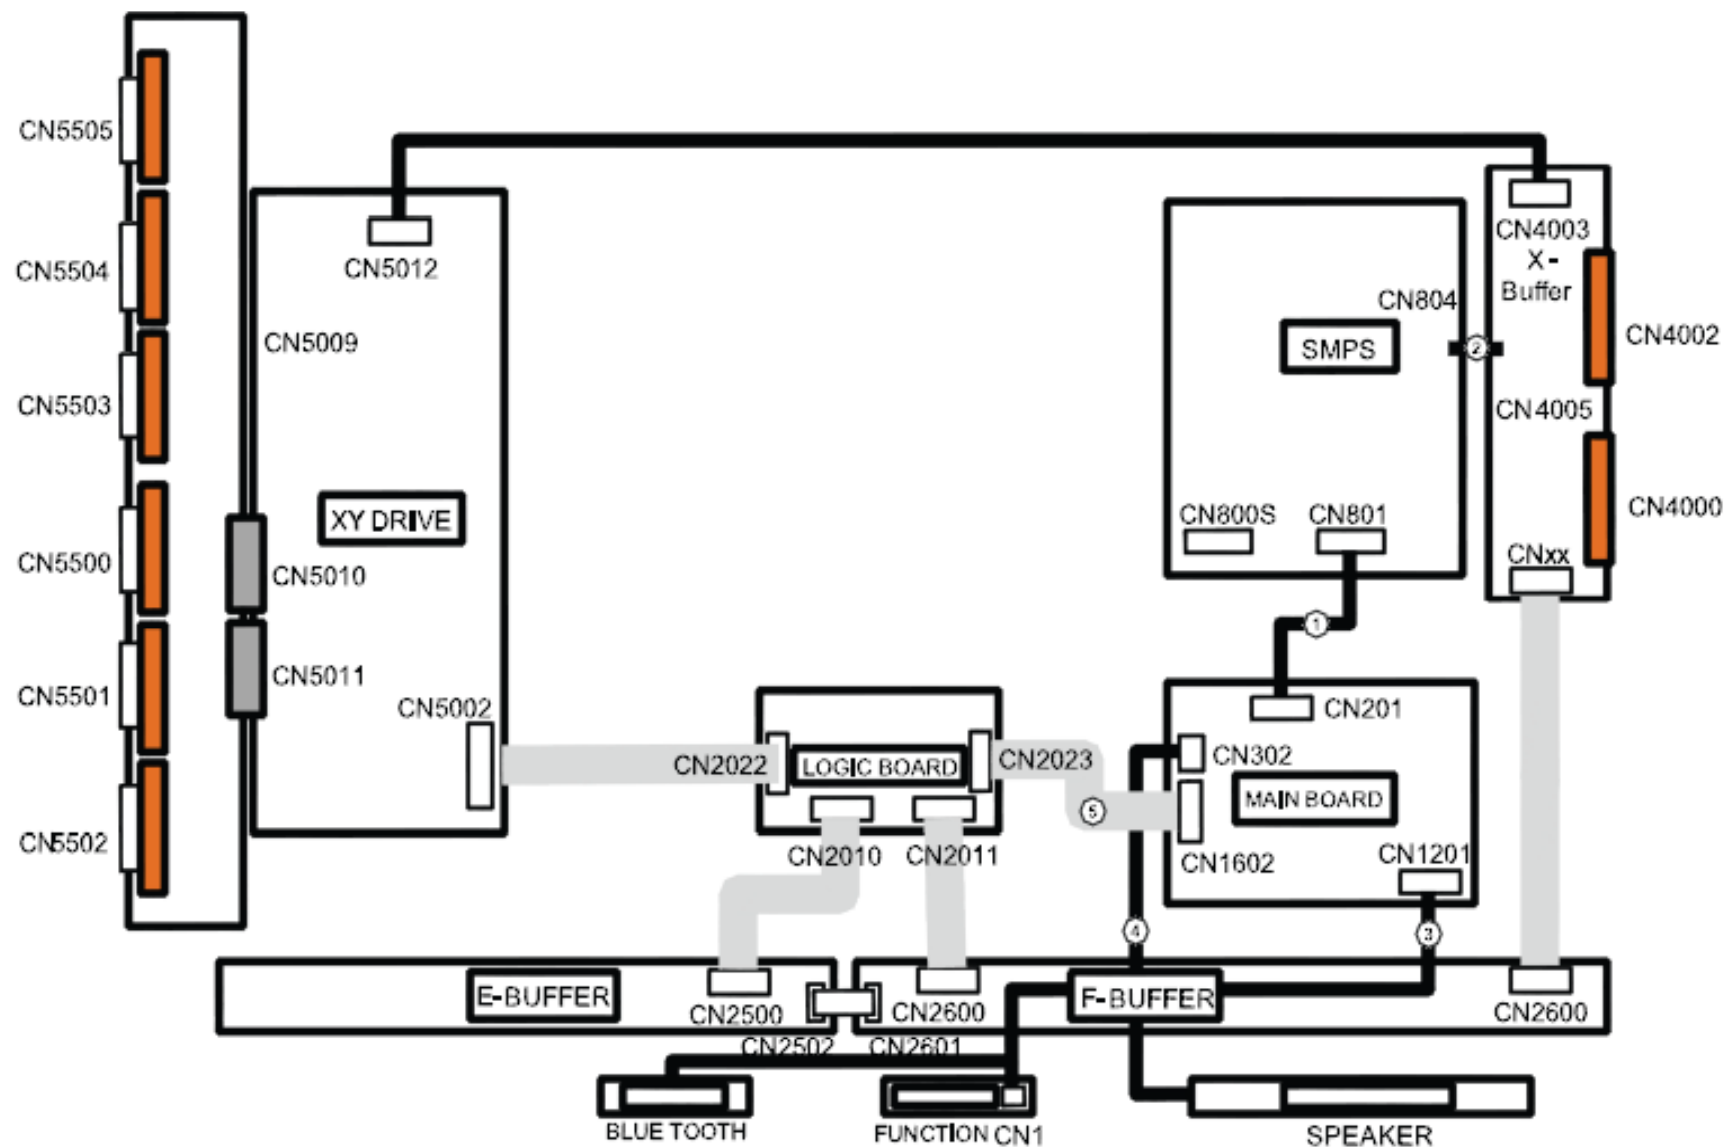

E450 Power On Sequence


SMPS (CN801) to/Fro Main Board (CN201)

CN801(SMPS) ↔ CN201(Main Board)

Pin No. (SMPS)	Signal(SMPS)
1	PS-ON (3.3V - 0V)
2	STBY (5.3V)
3	GND
4	D15V
5	GND
6	GND
7	D5.3V
8	D5.3V
9	GND
10	D15V
11	D15V
12	D5.3V

Power On Sequence (SMPS CN801):

1. Standby Power : STBY (5.3V)
2. Power On: PS-ON (3.3V - 0V)
3. Low Voltages On: D15V, D5.3V

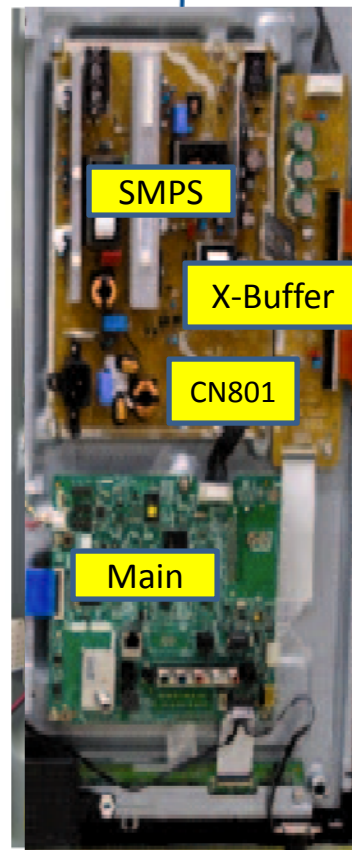


CN804 (SMPS) – CN4005

Pin No.(SMPS)	Signal(SMPS)	Pin No. (SMPS)	Signal (SMPS)
1	VS	7	D5.3V
2	VS	8	GND
3	N.C	9	VS_ON
4	VA	10	VS_CON
5	GND	11	PS_ON (3.3V - 0V)
6	D15V	12	GND

Power On Sequence Continued:

4. The PS ON signal, (3.3V- 0V) also at this connector, as it passes through the X- Buffer and the Logic Buffer Boards on its way to the Logic Board.
5. The VS_ON command returns from Logic Board turning on the VS & VA on the SMPS.
6. SMPS sends VS through X-Buffer Board to X/Y Main & VA through X- Buffer to the Logic Buffer Boards.

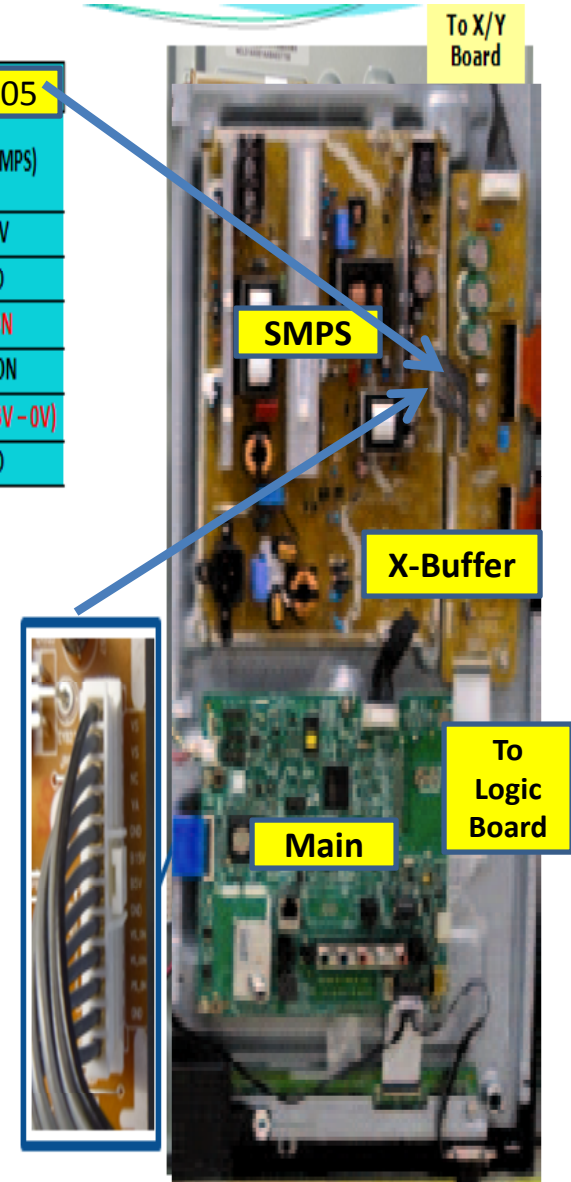

E450 Supply Adjustments

PNE490 Supply Adjustments "Vital Signs"


☐ NTSC	☒ NTSC/PAL		
Vs	Va	Vsc	Ve
203	58	-180	70

1. Record Readings
on PANEL LABEL

2. Go to SMPS
Power Board

3. Measure/Adjust
Vs Voltage

4. Measure/Adjust
Va Voltage

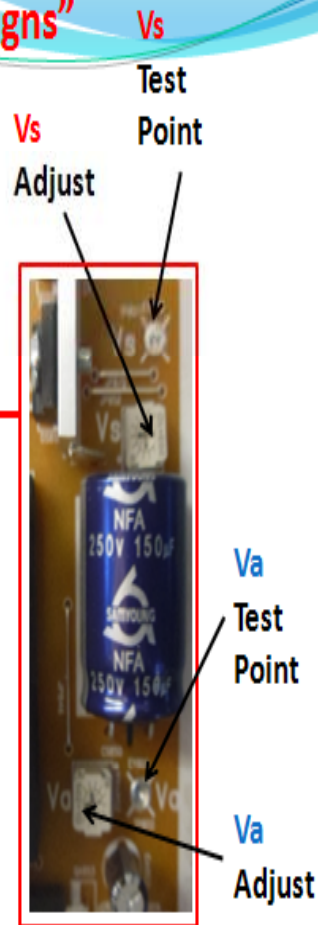

SMPS Adj.

☐ NTSC	☒ NTSC/PAL		
Vs	Va	Vsc	Ve
203	58	-180	70



Panel Label

X/Y Main Board

5. Go to X/Y Board

6. Measure/Adjust
Ve Voltage

7. Measure/Adjust
Vsc Voltage

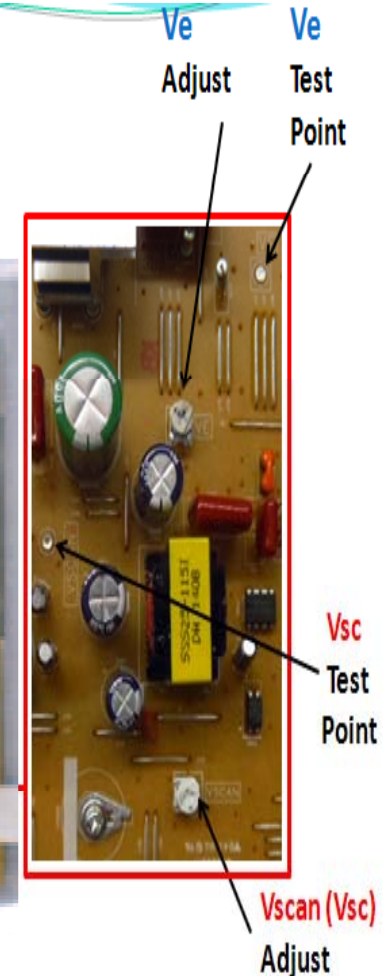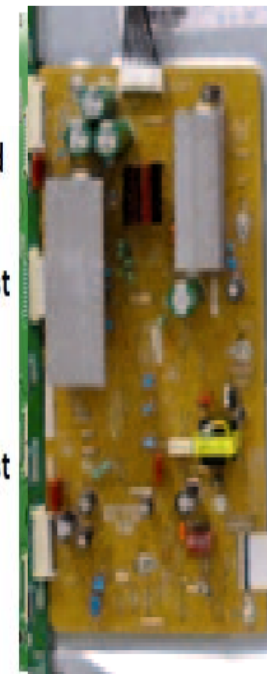


X/Y Main Adj.

Adjustment locations may slightly vary with size/version

Activating Power & Logic Board Test Patterns without Main Board:

1. Remove Power Cord to Panel
2. Short Highest 2 Pin #s on Logic Board
Test Jig (Can be 4 Pin or 6 Pin)

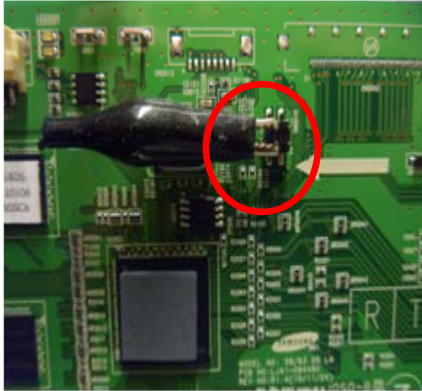

3. Remove Power Connector at Main Board (keeping connection to SMPS)
4. Short "Power On" Pin to Circuit Ground on Power Connector to SMPS.
5. Connect Power Cord to Panel



Note: Some TVs may just have PC Pads instead of pins on Logic Test Jig. Simply connect to the 3 & 4 pads.

Power Supply Trouble Shooting Notes:

2010/2011/2012 models

Will not be run when the "X" or "Y" or "Y/X" Main are disconnected. The SMPS will shut down immediately. However if a meter is first connected to the test point when power is applied it will read the correct voltage briefly before shutting down.(You have enough time to check key voltages!)

CAUTION: Do not reconnect any connectors to SMPS or Y/X Board(s) until power has been turned off long enough for Vs to drop below 10V or damage will occur to X/ Y Board(s).

VITAL SIGNS check Vs, Va, Vsc & Ve

When troubleshooting, It's very important to first check **Vs, Va, Vsc & Ve**

If **Vs** is missing (0V), disconnect power and check for short. Use ohm meter to measure resistance while disconnecting Y/X-Board supply feed.

Turn Power On and Test SMPS with short connector removed for correct Vs voltage verification. (It may only come up briefly but to full level). Again be careful not to reconnect Power Connectors until Vs falls below 10V.

If **Va** is low or missing, disconnect Supply Feed to Logic Buffer Boards and check to see if SMPS Supply is restored. .

If **Vsc** is low or missing and Vs was OK, the failure is with the **Y/X-Board** since the Y-Board section generates the Vsc voltage from the Vs supplied by the SMPS.

If **Ve** is low or missing and Vs is OK, the failure is with the **Y/X-Board** since the Ve is generated by the X-Board section from the Vs supplied by the SMPS

Other SMPS Voltages:

Check Low Voltage feeds to the Main Board and other supplied Assemblies.

Over Current Protection

For the SMPS Power Supply... If a short circuit occurs on either the VS or VA voltage lines, the SMPS stops operating, but should not fail. When the short circuit is removed from the source line, the Power Supply will operate normally again. **Many SMPS Supplies are replaced needlessly!**

Function Control Troubleshooting

- ✓ Standby **A3.3V** on Function Connector, Pin 3.

- ✓ All Pins should read **3.3V** before commands.

- ✓ **Press**, at Key 1, Pin 6. 3.3V to 0.0V DC

- ✓ **Left, Right, Up, Down** at Key 2, Pin 7. Check **specific voltages** on chart.

5 Directional Function Control


UNEH4000 Sample



CN702 (FUNCTION)			
1	IR	5	MSDA
2	GND	6	KEY1
3	A3.3V	7	KEY2
4	MSCL	8	GND


All Functions can be Tested in Standby Mode

(Standby Voltage)

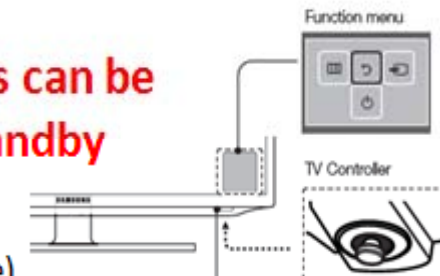

Command	PIN	Signal	DC Voltage/Notes
IR	1	IR	3.3V to 2.5V DC with any Remote Control Commands
Press	6	Key 1	3.3V to 0.0V DC
Left	7	Key 2	3.3V to 1.6V DC
Right	7	Key 2	3.3V to 2.5V DC
Up	7	Key 2	3.3V to 0.0V DC
Down	7	Key 2	3.3V to 0.8V DC

Actual IR Signal

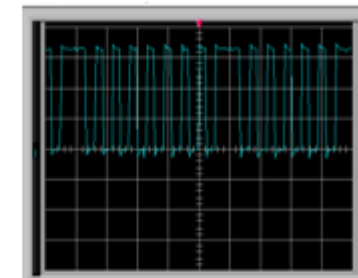

4V P-P Data

TROUBLESHOOTING VIDEO PROBLEMS

1. Verify Video Operation:

- Customer Picture Test
- "Display"
- If display & Customer Picture Test are OK source is suspected
- Substitute with known good source and cabling.

2. Using Test Patterns in Service Mode:

Customer Remote

- Power off
- Mute, 182, Power

Factory Remote:

- Power On
- Info, Test


3. Verify M-STAR Patterns

4. Verify Logic Patterns

If Logic Patterns are OK and M-Star are noisy, replace the defective LVDS Cable or Main Board.

If M-Star and Logic Patterns are both noisy check for specific on screen noise error to determine failure. (next slide)

2012 PDP Signal Path for Troubleshooting







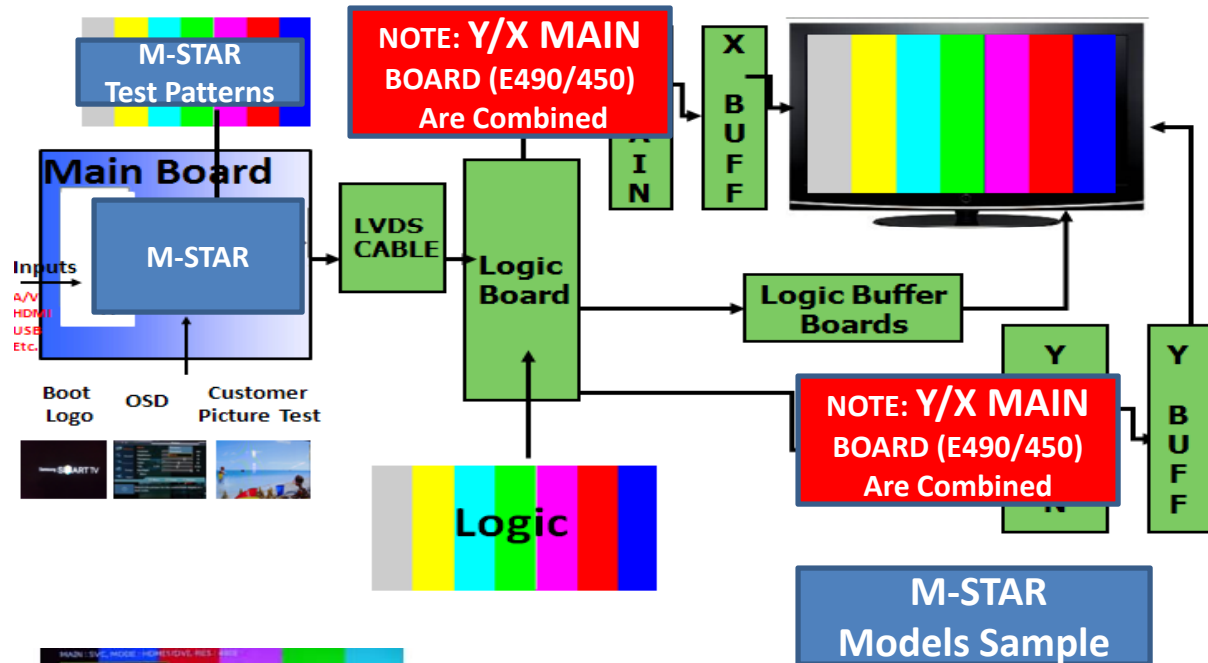


Fast Track Troubleshooting Manual



ON SCREEN FAILURE EXAMPLES:

NOTE: X/Y MAIN Combined.

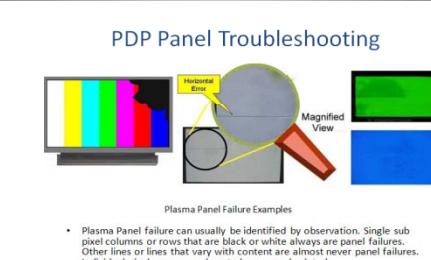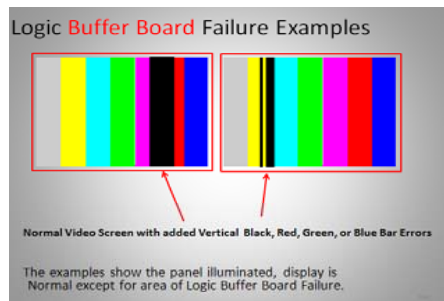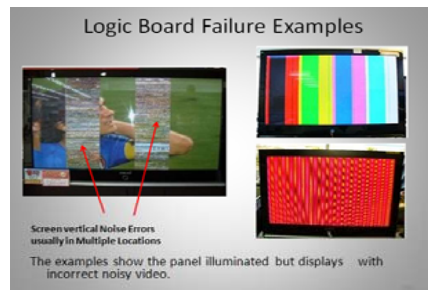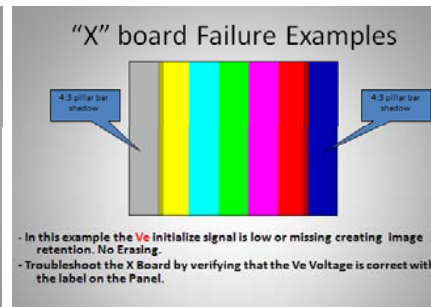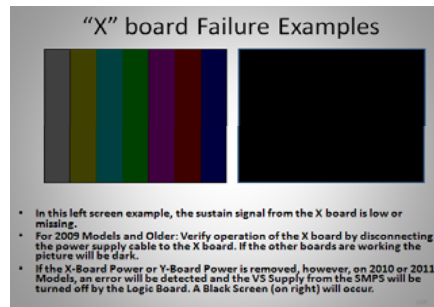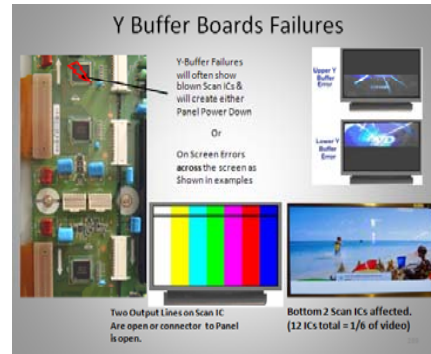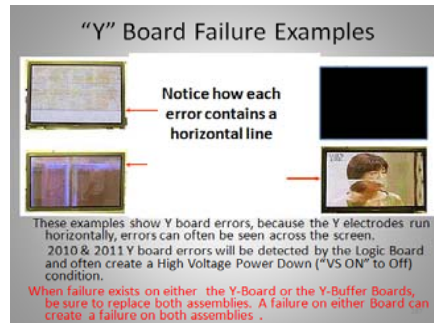

ALIGNMENTS:

1. Check/Adj. VS, VA, VE, & VSC according to Panel Label and Diffusion test. (see bulletins for any special notes before making changes)



DIFFUSION TEST/ADJ. (cell miss-firing)

- Allow the unit to warm up 15 to 20 minutes
- Access the Burn Protect Sig. Pattern in Cust. Menu.
- Adjust the Vs volts until screen errors are gone in both dark and bright areas.
- Adjust the Vs volts within +/- 10V on the panel label.
- **NOTE: Diffusion may appear with aging panels.**
- **New panels with Diffusion consult bulletins and/or report problem.**

2. Check/Set Option Bytes:

PN43E450A1FXZA Table Listed below

Model Code	Side Label	Type	Basic Model	SVC Model
PN43E450A1FXZA	SS01	43EHHcD	PE440A	PE440A
PN43E450A1FXZA	TS02	43EHHcD	PE440A	PE440A

Option				
Tuner	Region	Ch Table	Front Color	Local Set
-	-	SAMEX	None	US
-	-	SAMEX	None	US